

MANHASSET®

The standard of excellence around the world since 1935.

Instructions for assembly: Symphony, Director's & Orchestral Music Stands


CAUTION: Do NOT apply any lubricant to the height adjustment shaft of these music stands, as that may cause the friction-grip clutch to lose some of its hold power.

TOOLS REQUIRED:

Screwdriver




11/16 or 17MM
Wrench

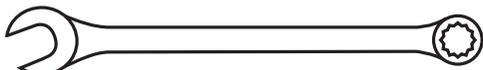


or


Ratchet with
11/16 or 17mm
Socket

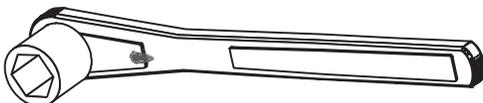


- ① Remove bolt and base cup washer from base of center column.

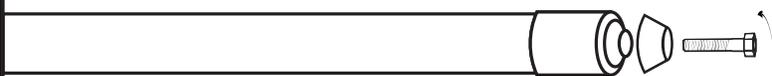


- ② Place tripod base over lower end of center column, replace retaining base assembly and tighten very securely.

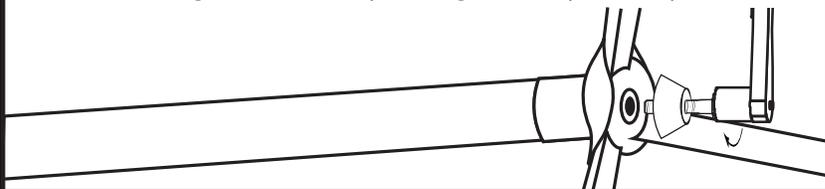


- ③ Extend the chrome inner shaft approximately 7 inches and place into neck assembly on backside of desk with a rotating motion.

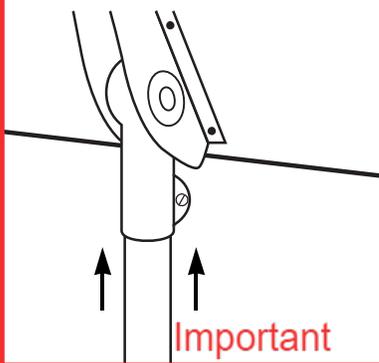

- ④ Ensure shaft is fully inserted into neck assembly. (to the depth of dashed line indicated on illustration)

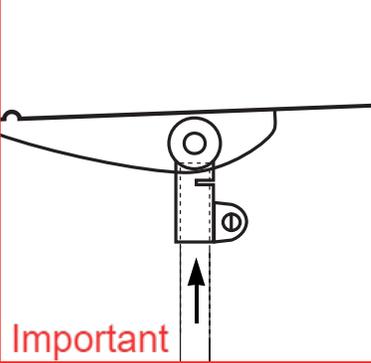

Music Stand Parts (Rear View)

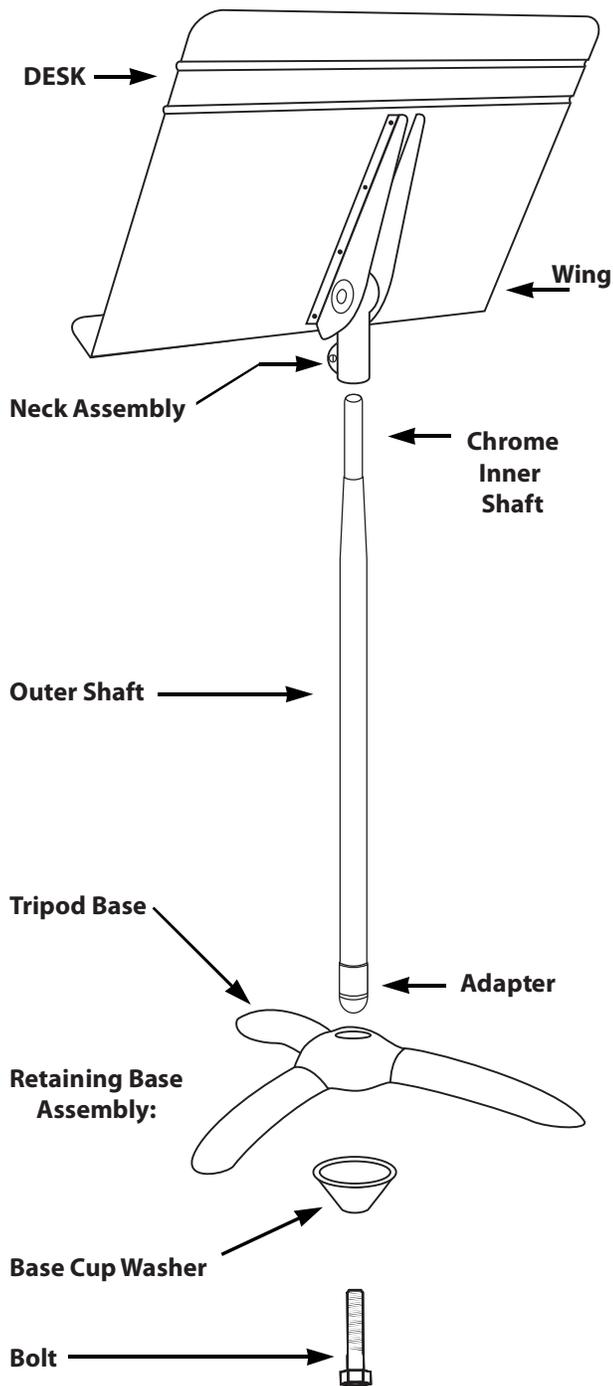

- ⑤ Tighten clamp onto the chrome shaft using a screwdriver.

